

Replacement Instructions ACF unit for Projector

Model No. **ET-ACF100**

Read these instructions completely before replacement.

Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.



Cd

Precautions with regard to safety

CAUTION

Be sure to use the projector with the ACF unit installed.

- Sucking dust or dirt may cause troubles to the projector.
If the ACF unit is not installed, power will be automatically shut down.

 
Replacing the ACF

- Before replacing the ACF
 - Press the power button twice to turn off the projector.
(The power indicator will turn orange.)
 - Wait until the cooling fan stops and the POWER indicator turn to RED.
 - Disconnect the mains plug from the mains socket.
 - Prepare a Phillips-head screw driver.


Replacement procedure

Indicated replacement procedure below is for F300 series projectors. For the other series of projector, refer the Operating Instructions that is provided with your projector.

1. Turn the projector upside down and place it gently on a soft cloth.
2. Use a Phillips-head screwdriver to loosen 3 **ACF cover** fixing screws until the screws turn freely and remove the **ACF cover**.

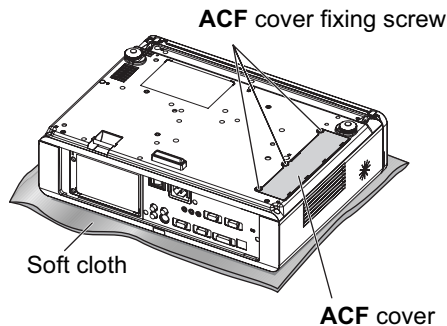

 3. Hold the pushes of the locking detents inward with fingers to release the lock, and pull out carefully the "ACF unit" from the body.

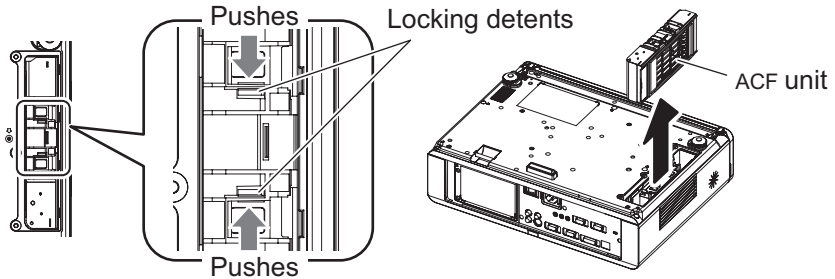


* When you replace the ACF unit, clean the compartment and/or the Air exhaust port if you need to.

4. Insert a new "ACF unit" into the compartment until it catches the both locking detents.

5. Attach the ACF cover and tighten the ACF cover fixing screws securely with a Phillips-head screwdriver.

 6. Once the "ACF unit" has been replaced, press and hold the [ENTER] button for about three seconds on the [FILTER COUNTER RESET] submenu which can be selected from the [PROJECTOR SETUP] menu.

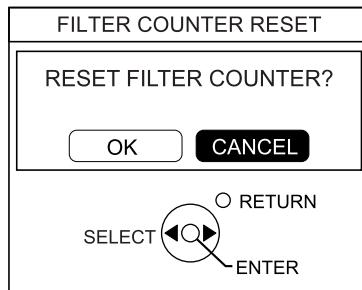

7. Press ◀ to select OK and press the ENTER button to reset the FILTER REMAINING to "0".

Notice:

Use this product with the "ACF unit" installed. If you use the projector without the unit, the power will be shut off in order to prevent a possible failure due to the collected dust and dirt.

Panasonic Corporation

Web Site : <https://panasonic.net/cns/projector/>
© Panasonic Corporation 2009

Printed in Japan